



CLAM GRILL

USER MANUAL

CONTENTS

- 1- GENERAL INFORMATION
- 2- PRODUCT INTRODUCTION
- 3- TECHNICAL SPECIFICATIONS
- 4- TRANSPORTATION AND STORAGE CONDITIONS
- 5- UNPACKING THE PRODUCT
- 6- INSTALLATION
- 7- GENERAL WARNINGS
- 8- USAGE INSTRUCTIONS
- 9- CLEANING AND MAINTENANCE
- 10- TROUBLESHOOTING
- 11- SPARE PARTS LIST
- 12- WARRANTY CERTIFICATE AND TERMS

DEAR USER,

AS MAKFRY FAMILY, WE THANK YOU FOR CHOOSING OUR DEVICE AND FOR YOUR TRUST IN OUR COMPANY. WE IMPORTANTLY REMEMBER YOU TO READ THE INSTRUCTIONS AND INFORMATION IN THE USER MANUAL CAREFULLY AND HAVE YOUR USERS READ IT IN ORDER TO GET THE PRODUCT SUITABLE FOR YOUR EXPECTATIONS AND TO USE IT FOR A LONG-TERM.

THE INFORMATION REGARDING THE INSTALLATION, USAGE AND MAINTENANCE OF THE PRODUCT YOU HAVE PURCHASED IS INCLUDED IN THE USER'S MANUAL.

PLEASE READ THE USER MANUAL CAREFULLY BEFORE INSTALLING YOUR DEVICE. THE CONNECTION NETWORK MUST BE PREPARED BY AUTHORIZED PERSONNEL IN ACCORDANCE WITH THE LEGAL REGULATIONS. IF THE MAINS VOLTAGE TO THE ELECTRICAL CONNECTION OF YOUR DEVICE IS NOT IN SUITABLE CONDITIONS, THE VOLTAGE OVER THE DEVICE'S CAPACITY WILL CAUSE FAILURE AND YOUR DEVICE WILL BE OUT OF THE SCOPE OF WARRANTY.

1- GENERAL INFORMATION

THIS USER'S MANUAL CONTAINS INFORMATION ABOUT MAKFRY CLAM GRILL INSTRUCTIONS FOR USE, REQUIREMENTS AND COVERAGE OF WARRANTY.

CAREFULLY READ ALL INSTRUCTIONS AND WARNINGS IN THE USER'S MANUAL. THIS USER'S MANUAL CONTAINS IMPORTANT INFORMATION ABOUT THE SAFE INSTALLATION, USE AND MAINTENANCE OF YOUR PRODUCT.

THE MANUFACTURER CANNOT BE RESPONSIBLE FOR DAMAGES TO HUMAN, ENVIRONMENT OR OTHER MATERIALS ARISING FROM PRINTING OR TRANSLATION OF THE USER'S MANUAL. INCIDENTAL DAMAGE TO YOUR PRODUCT, NEGLIGENCE, DAMAGE DUE TO FAILURE TO FOLLOW INSTRUCTIONS AND REGULATIONS OR WRONG CONNECTIONS AND UNAUTHORIZED INTERFERENCE TO THE PRODUCT SHALL EXCEED THE PRODUCT WARRANTY PROCESS.

KEEP THIS USER MANUAL IN AN EASY ACCESS PLACE FOR USE IF NEEDED.

2- PRODUCT INTRODUCTION

MAKFRY CLAM GRILL IS DESIGNED TO BE USED IN INDUSTRIAL KITCHENS AND IT IS RECOMMENDED FOR USE BY PROFESSIONAL USERS.

3- TECHNICAL SPECIFICATIONS

DIMENSION	WIDTH:450 MM - DEPTH:870 MM – HEIGHT: 630 MM
ENERGY	380-400 V 6 kW 50-60 HZ
WEIGHT	33 KG (GROSS)

4- TRANSPORTATION AND STORAGE CONDITIONS

THE PRODUCT IS SPECIALLY PACKED AND SHIPPED IN A FORM. CARRY THE PRODUCT WITH THE FORKLIFT FEET INSTALLED UNDER THE PALLET. IF THE TRANSPORT DISTANCE IS FAR, IT MUST BE MOVED SLOWLY AND SUPPORTED BY AN ADDITIONAL PERSON TO AVOID LOSS OF BALANCE. DO NOT KNOW OR DROP THE PRODUCT WHEN CARRYING IT. IF THE PRODUCT IS TO BE STORED WITHOUT USING, IT SHOULD BE STORED WITHOUT OPENING ITS PACKAGING AND CASE. IF THE PRODUCT IS TO BE USED AND STORED AGAIN, IT MUST BE PROTECTED BY CLEANING AND PACKAGING

5- UNPACKING THE PACKAGE

CHECK THAT THE PRODUCT IS NOT DAMAGED DURING SHIPPING. CHECK THAT THE PARTS OF THE PRODUCT ARRIVES COMPLETELY.

PARTS IN CONTACT WITH FOOD ARE MADE OF STAINLESS STEEL. PLASTIC PARTS IN CONTACT WITH FOOD ARE MANUFACTURED ACCORDING TO FOOD REGULATIONS. ALL PLASTIC PARTS ARE MARKED WITH THE MATERIAL SYMBOL.

DISPOSE THE PACKAGING MATERIALS OF THE PRODUCT AFTER INSTALLATION ACCORDING TO THE SAFETY AND ENVIRONMENTAL CONDITIONS AND ACCORDING TO THE REGULATIONS OF THE COUNTRY YOU ARE IN. TAKE THE RECYCLABLE MATERIAL (FOIL, CARTON, STYROFOAM, ETC.) INTO THE RELEVANT RECYCLING BOXES. WHEN DISPOSAL OF ANY ELECTRICAL EQUIPMENT, MAKE IT UNUSABLE BY CUTTING THE CABLE.

6- INSTALLATION

INSTALLATION MUST BE DONE BY AN AUTHORIZED TECHNICIAN ACCORDING TO THE INSTRUCTIONS AND REGULATIONS. OUR COMPANY CANNOT BE LIABLE FOR ANY DAMAGES DUE TO INCORRECT INSTALLATION.

IF THE PRODUCT FAILS, TURN OFF THE PRODUCT. ONLY A SERVICE AUTHORIZED BY THE MANUFACTURER MUST PROVIDE THE PRODUCT.

FAULTS MUST BE REPLACED WITH ORIGINAL SPARE PARTS. THE PARTS LIST IS ALSO STATED IN THE BOOKLET.

THE FLOOR ON THE PRODUCT MUST BE FLAT. NECESSARY PRECAUTIONS MUST BE TAKEN AGAINST THE RISKS OF THE PRODUCT TO TURNOVER.

THE PRODUCT MUST BE CONNECTED TO THE MAIN NETWORK BY AN AUTHORIZED ELECTRICAL TECHNICIAN ONLY IN ACCORDANCE WITH THE LAW AND REGULATIONS. MAKE SURE THAT THE POWER FROM THE MAIN NETWORK WILL MATCH THE POWER OF THE PRODUCT. MAKE THE GROUND CONNECTION OF THE PRODUCT ACCORDING TO THE STANDARDS AND SAFETY RULES. GROUNDING OF THE PRODUCT MUST BE CONNECTED TO THE EARTH LINE ON THE NEAREST PANEL OF THE ELECTRICAL INSTALLATION. THE PRODUCT ELECTRICAL CONNECTION, MAIN FUSE AND LEAKAGE FUSE MUST COMPLY WITH THE APPLICABLE REGULATIONS AND RULES.

IF MULTIPLE ELECTRONIC DEVICES ARE BEING USED, A SEPARATE POWER LINE SHOULD BE DRAWN FOR EACH DEVICE. CABLES THAT CARRY SENSOR AND INPUT SIGNALS TO THE DEVICE SHOULD BE CARRIED SEPARATELY FROM POWER, CONTROL, AND INDUCTIVE LOAD CABLES THAT OPERATE IN A


SWITCHABLE MANNER, AND SHOULD BE KEPT AS FAR AWAY AS POSSIBLE TO PREVENT INTERFERENCE. NECESSARY PRECAUTIONS SHOULD BE TAKEN TO PREVENT LIQUIDS FROM ENTERING THE DEVICE AND TO PREVENT CONDUCTIVE METAL PARTS FROM ENTERING THE DEVICE. OTHERWISE, ACCIDENTS SUCH AS FIRE AND ELECTRIC SHOCK MAY OCCUR.








7- GENERAL WARNINGS

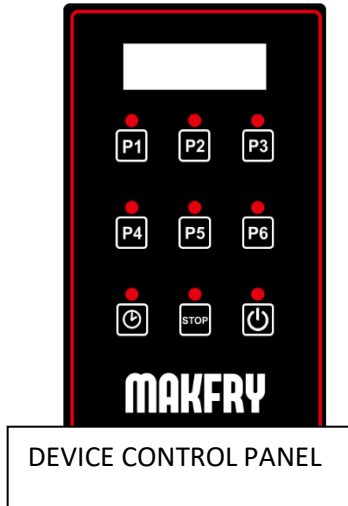THE DEVICE MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE REGULATIONS AND USED IN A WELL-VENTILATED AREA. REFER TO THE INSTRUCTIONS FOR INSTALLATION AND USE BEFORE OPERATING THE DEVICE. THE DEVICE IS DESIGNED FOR INDUSTRIAL PURPOSES AND SHOULD ONLY BE OPERATED BY TRAINED PERSONNEL. DO NOT ATTEMPT TO INTERFERE WITH THE DEVICE WITHOUT USING APPROPRIATE PROTECTIVE EQUIPMENT. KEEP THE DEVICE CABLE AWAY FROM HOT SURFACES. DO NOT RUN THE DEVICE IDLE TO PROLONG ITS LIFESPAN AND KEEP IT CLOSED WHEN NOT IN USE. DURING PROLONGED USE, LET THE DEVICE REST FOR AT LEAST 10 MINUTES EVERY 4 HOURS. NEVER PLACE FLAMMABLE LIQUIDS OR SOLIDS NEAR THE DEVICE WHILE IT IS RUNNING. IF THERE IS ANY REASON FOR FIRE OR FLAME IN THE AREA WHERE THE DEVICE IS USED, TURN OFF THE POWER SWITCH IMMEDIATELY. NEVER EXTINGUISH THE FLAME WITH WATER; USE AN APPROPRIATE FIRE EXTINGUISHER. DEVICES WITHOUT GROUNDING CONNECTIONS WILL NOT BE COVERED BY THE WARRANTY, AND DO NOT USE NON-ORIGINAL SPARE PARTS IN THE DEVICE.

8- USAGE INSTRUCTIONS


DO NOT TOUCH ANY BUTTON UNTIL THE POWER BUTTON LIGHT IS ON WHEN ENERGY IS SUPPLIED TO THE DEVICE.








P1	IF THE P1 STAGE IS SELECTED WHILE THE DEVICE IS ON, RL1 OUTPUT IS PERFORMED DURING THE PRESET (10 SECONDS). PRESS  TO CHANGE THE DURATION OF THE P1 STEP, THE P1 P4 BUTTON IS PRESSED AND THE TIME CAN BE CHANGED WITH THE HELP OF THE  BUTTONS. HOLD THE  BUTTON TO REGISTER.
P2	IF THE P2 STAGE IS SELECTED WHILE THE DEVICE IS ON, RL1 OUTPUT IS PERFORMED DURING THE PRESET (20 SECONDS). PRESS  TO CHANGE THE DURATION OF THE P2 STEP, THE P1 P4 BUTTON IS PRESSED AND THE TIME CAN BE CHANGED WITH THE HELP OF THE  BUTTONS. HOLD THE  BUTTON TO REGISTER.
P3	IF THE P3 STAGE IS SELECTED WHILE THE DEVICE IS ON, RL1 OUTPUT IS PERFORMED DURING THE PRESET (30 SECONDS). PRESS  TO CHANGE THE DURATION OF

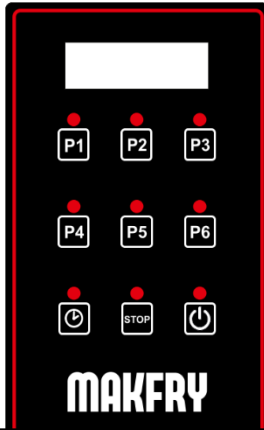

	<p>THE P3 STEP, THE P1 P4 BUTTON IS PRESSED AND THE TIME CAN BE CHANGED WITH THE HELP OF THE ⌚ BUTTONS. HOLD THE ⌚ BUTTON TO REGISTER.</p>
P4	<p>IF THE P4 STAGE IS SELECTED WHILE THE DEVICE IS ON, RL1 OUTPUT IS PERFORMED DURING THE PRESET (40 SECONDS). PRESS ⌚ TO CHANGE THE DURATION OF THE P4 STEP, THE P1 P4 BUTTON IS PRESSED AND THE TIME CAN BE CHANGED WITH THE HELP OF THE ⌚ BUTTONS. HOLD THE ⌚ BUTTON TO REGISTER.</p>
P5	<p>IF THE P5 STAGE IS SELECTED WHILE THE DEVICE IS ON, RL1 OUTPUT IS PERFORMED DURING THE PRESET (50 SECONDS). PRESS ⌚ TO CHANGE THE DURATION OF THE P5 STEP, THE P1 P4 BUTTON IS PRESSED AND THE TIME CAN BE CHANGED WITH THE HELP OF THE ⌚ BUTTONS. HOLD THE ⌚ BUTTON TO REGISTER.</p>
P6	<p>IF THE P6 STAGE IS SELECTED WHILE THE DEVICE IS ON, RL1 OUTPUT IS PERFORMED DURING THE PRESET (60 SECONDS). PRESS ⌚ TO CHANGE THE DURATION OF THE P6 STEP, THE P1 P4 BUTTON IS PRESSED AND THE TIME CAN BE CHANGED WITH THE HELP OF THE ⌚ BUTTONS. HOLD THE ⌚ BUTTON TO REGISTER.</p>



DEVICE CONTROL PANEL

	TO CHANGE PRE-DEFINED TIMES, PRESS THE  BUTTON IS HOLD AND THE TIME IS CHANGED WITH THE HELP OF THE P1 P4 BUTTONS. HOLD  BUTTON TO REGISTER.
	IF THE STOP BUTTON IS PRESSED WHILE THE DEVICE IS WORKING, THE DEVICE STOPS RELAY OUTPUT.
	USED TO TURN THE DEVICE ON AND OFF

9- CLEANING AND MAINTENANCE

AFTER EACH USE:

- Make sure the device is unplugged or turned off before cleaning it.
- Clean the device with a cloth soaked in warm soapy water at the end of each day.
- If you won't be using the device for a long time, cover its surface with a thin layer of vaseline.
- Do not use acid or similar materials, pressurized water, or steam to clean the device.
- Do not clean the external surface of the device with materials that can scratch it, like stainless steel scrubbers.

DURING MAINTENANCE:

- Maintenance should only be performed by trained personnel.
- Parts that need to be removed during periodic maintenance should be taken out and reassembled by a technical service.
- Electrical maintenance of the device should be performed using dry air spray after cutting off the electrical connections, according to usage frequency.

10- TROUBLESHOOTING

PROBLEM	CAUSE OF THE PROBLEM	PROBLEM SOLUTION
THE DEVICE DOES NOT WORK	1- ELECTRICITY MAY NOT BE COMING TO THE DEVICE 2-FUSE MAY NOT BE OPEN	- CHECK THE ELECTRICAL CONNECTION. - CHECK IF THE FUSE IS OPEN.
DEVICE STOPPED	1- THE DEVICE MAY STOP DUE TO LOW VOLTAGE	- CHECK THE VOLTAGE
IF ANY SECURITY FUNCTIONS OF YOUR DEVICE DOES NOT WORK, TURN OFF THE DEVICE, DO NOT USE AND MUST CONTACT OUR AUTHORIZED SERVICE.		

11- SPARE PARTS LIST

AUTHORIZED SERVICE FOR THE SPARE PARTS LIST.

12- WARRANTY CERTIFICATE AND TERMS

AS MAKFRY FAMILY, THANK YOU FOR CHOOSING OUR PRODUCTS. WARRANTY DOCUMENT MUST BE KEPT DURING THE WARRANTY PROCESS. IF THE DOCUMENT IS LOST, A SECOND DOCUMENT WILL NOT BE GIVEN TO THE CUSTOMER AND THIS DOCUMENT MUST BE SHOWED WHEN THE CUSTOMER REQUIRES WARRANTY REPAIR. OTHERWISE, REPAIR IS CHARGED. IF THE WARRANTY DOCUMENT IS UNCLEAR, MAKFRY MAY ALSO REQUEST A CERTIFICATE OF PURCHASE.

- 1- THE WARRANTY PROCESS STARTS FROM DELIVERY DATE TO THE CONSUMER AND IS 2 YEARS. DIGITAL PANEL IS 1 YEAR, RESISTANCES ARE 6 MONTHS.
- 2- IF THE GOODS FAILS WITHIN THE WARRANTY PERIOD, THE PERIOD IN REPAIR IS ADDED TO THE WARRANTY PERIOD. THE REPAIR TIME OF THE GOODS IS A MAXIMUM 30 BUSINESS DAYS.
- 3- MAINTENANCE AND REPAIR MUST BE DONE BY AUTHORIZED BY MAKFRY. OTHER INTERVENTIONS, THE GOODS WILL BE OUT OF THE SCOPE OF WARRANTY.
- 4- IF DEFECTIVE MATERIAL AND/OR WORKMANSHIP CAUSES FAILURE DURING THE WARRANTY PERIOD, MAKFRY WILL MAKE THE NECESSARY ARRANGEMENTS AT ITS OWN EXPENSE, AND ITS ANY DAMAGES UNDER THE SCOPE OF THE WARRANTY.
- 5- WARRANTY DOES NOT COVER CONSEQUENTIAL DAMAGES, INCLUDING LOSS OF BUSINESS OR INFORMATION, AND DOES NOT APPLY TO THE FOLLOWING CASES:
 - IF THE GOODS IS USED AGAINST THE METHODS OR CONDITIONS STATED IN THE PROMOTION AND USER'S GUIDE OR APPENDIX,
 - IF IT IS DETERMINED THAT THE GOODS WAS PREVIOUSLY REPAIRED OR OPENED BY NON-AUTHORIZED PERSONS AND/OR REPAIR WORKSHOPS,
 - IF THE GOOD IS USED WITH UNAPPROPRIATE VOLTAGE OR WITH FAULTY ELECTRICAL INSTALLATION WITHOUT THE KNOWLEDGE OF AUTHORIZED SERVICES DETERMINED BY MAKFRY.

- IF THE SERIAL NUMBER OF THE GOODS IS DAMAGED OR DISASSEMBLED, ANY MODIFICATION IS MADE TO THE WARRANTY DOCUMENT OR PURCHASE DOCUMENTS, OR THE DOCUMENTS HAVE BEEN ILLEGAL,
 - IF FAULT OR DAMAGE OCCURRED DURING SHIPPING, WHICH IS NOT MAKFRY'S RESPONSIBILITY,
 - IF THE EXTERIOR SURFACES OF THE GOODS ARE DAMAGED WITHIN THE CONSUMER RESPONSIBILITY,
 - IN CASE OF FAULTS CAUSED BY ACCESSORIES OR OTHER DEVICES THAT CAN BE USED WITH THE PRODUCT AND PURCHASED FROM A PLACE OUTSIDE OF OUR COMPANY OR OUR AUTHORIZED SERVICES,
 - IN CASE OF FAILURES AND DAMAGES CAUSED BY NATURAL DISASTERS SUCH AS FIRE, LIGHTNING, FLOOD, EARTHQUAKE ETC,
 - IF THE ELECTRONIC PARTS OF THE GOODS ARE DAMAGED DUE TO LIQUID CONTACT WITH THE CONSUMER'S RESPONSIBILITY,
 - THE WARRANTY DOES NOT COVER ANY WEAR PRODUCTS AND/OR PRODUCT PARTS MADE OF ACCESSORIES OR GLASS, WHICH CAN BE CONSIDERED AS CONSUMABLES BY NATURE,
 - IF THE FAILURE IS CAUSED BY ERRORS OR MISUSE OF THE PRODUCT OR ENVIRONMENTAL CONDITIONS THAT DO NOT FOLLOW THE RECOMMENDED CONDITIONS OF USE OF THE PRODUCT,
 - THE WARRANTY IS FOR CORROSION, DEFORMATIONS AND DAMAGES OCCURRING IN ESPECIALLY ELECTRICAL COMPONENTS ARISING FROM OPERATION OF THE DEVICE IN ACIDIC OR HUMID ENVIRONMENTS.
 - IN TSE OR CE CERTIFIED PRODUCTS USED, EXCEPT MAKFRY SPECIAL PRODUCTION ON THE GOODS.
- 6- TRANSPORTATION COSTS OF MAKFRY AUTHORIZED SERVICE PERSONNEL IN THE REPAIR PROCESS TO BE DONE WHERE THE GOODS ARE AVAILABLE, WITH ON-SITE SERVICE. ACCORDING TO THE AUTHORIZED SERVICE DETECTION, THE REPLACEMENT/REPAIR OF THE WARRANTY WILL BE MADE WITH OR FREE OF CHARGE.
- 7- İZMİR COURTS AND EXECUTION OFFICES ARE AUTHORIZED IN CASE OF CONFLICT OF SCOPE OF WARRANTY.

MODEL	
SERIAL NUMBER	
WARRANTY PERIOD	
WARRANTY PROCESS START	



ADDRESS:GÖKDERE CADDESİ NO:27/A

35040 - GÖKDERE / BORNOVA/ İZMİR

CONTACT: +90 232 207 21 51

E-MAIL: INFO@MAKFRY.COM

STAMP - SIGNATURE